


## MERCEDES-BENZ SPRINTER FLOOR PLANS





## Mercedes-Benz

1 WHEELCHAIR POSITION

**2 WHEELCHAIR POSITIONS** 

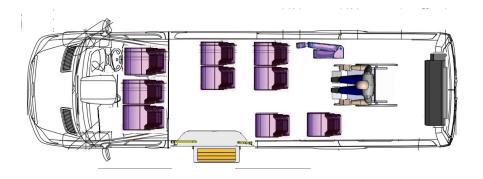

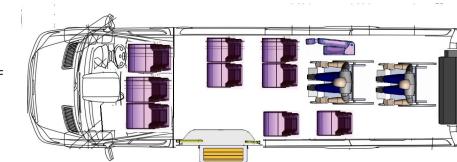

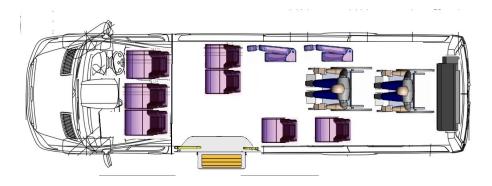

FLOOR PLANS ARE BASED OFF A LWB 316 SPRINTER TRANSFER BUS WITH A GVM OF 3880.

WE CAN MODIFY THE OTHER RANGE OF SPRINTERS WITH SLIGHT VARIATION DEPENDING ON WHEELBASE & GVM CONFIGURATION.

PLEASE CONTACT US IF YOU HAVE ANY QUERIES RELATING TO SPRINTERS.

## 3 WHEELCHAIR POSTION ALSO AVAILABLE

OPTIONAL UPGRADE TO 500KG LOADER ALSO AVAILABLE

